



### Fan-coil check:





As you already know, Campus Sanpaolo is an A-class energy building. This means that to live in a comfortable way it's necessary that you have all the information about the heating and air conditioning system, and how it works.





First of all, you have to remind that:

The conditioning system is handled by a management program that carries out checks in all room via SET POINT. Each flat has two set points

EMPTY ROOM: Set point to + 18° degrees

BUSY ROOM: Set point to + 21° degrees

#### Set points are managed by the reception



EMPTY ROOM: Set point to + 18° degrees

Also in case you leave the room empty for some days, if the temperature falls down 18° degrees, the set point authomatically starts heating system to restore the right temperature.

#### Set points are managed by the reception



BUSY ROOM: Set point to + 21° degrees


In the moment in which you insert the key in the pocket, the heating system starts to increase the temperature from 18° to 21° degrees.

# We remind you that the heating system will start after few minutes.



#### HOW DOES THE SYSTEM WORK AND WHAT SHOULD I DO TO MANAGE THE TEMPERATURE WITH + OR – DEGREES?


The system works with a thermostat that you can find in all rooms.

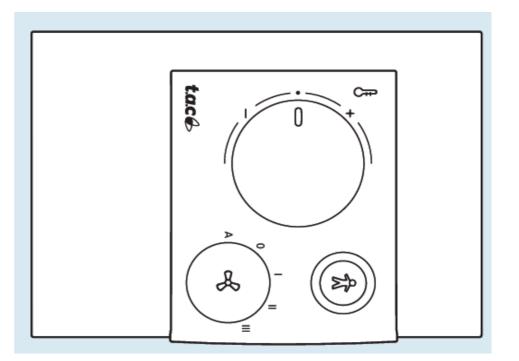



#### HOW DOES THE SYSTEM WORK AND WHAT IF A WANT TO MANAGE THE TEMPERATURE WITH + OR – DEGREES?

#### How the thermostat is composed:

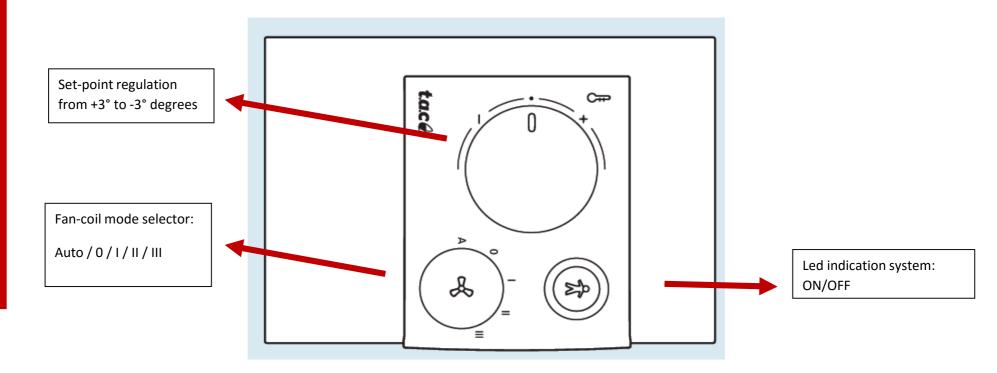





 Set the temperature between 18° and 24° degrees, moving the dial from «0» (set point temperature) to 18° degrees rounding to «-» or 24° degrees rounding to «+» just if you have set the dial on «A» (which means authomatic)





#### WHAT COULD I DO?



### 2. Do an air circulation moving the dial **from A to I – II – III**

3. Switch off the heating system setting the dial on **«O**»



#### WHAT SHOULD I REMIND?

- 1. When you open the window, the system stops the heating/air conditioning and it does an air circulation of current air which you will feel as «cold» in winter and «hot» in summer.
- 2. The air circulation function will start also with closed window if you move the dial from «A» to «I-II-III»




## HOW CAN I USE CORRECTLY THE HEATING/AIR CONDITIONING SYSTEM?

- 1. Set the dial on **«A» (which means authomatic)**
- 2. Close the window
- 3. Set the temperature

# After this setting, if you feel too much cold/hot temperature please come in Reception and we will check the SET POINT degrees.



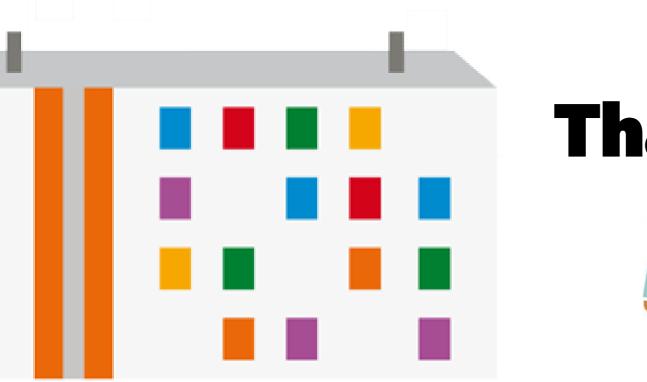

### Thank you!

